

VARIOstar K50/D50



VARIOstar K50/D50 BRUSHLESS HANDPIECE

*The all-around handpiece for the modern dental laboratory
- unbeatable in quality and price!*

VARIOstar handpiece



Knee control or tabletop unit

Select your appropriate control unit.

- Knee control unit
- Tabletop unit

Optimal service

Long working life, minimal downtime, low service costs and service direct from the manufacturer.

100% compatible with your suction system

We guarantee 100 % compatibility with your existing suction system. Regardless of the brand you use, just connect and work clean - handpiece recognition is guaranteed to work.

Lifetime guarantee

Brushless handpiece - Lifetime warranty on the armature and winding, 12-month warranty on all consumable parts.

Performance

Stable torque through the entire speed range, simple operation and good solid performance make this handpiece a reliable and down-to-earth partner for your dental laboratory.

Ergonomic

The VARIOstar D50 handpiece is easy to grip, comfortable and supports fatigue-free work.

Compatible with C2 series Profi/Master

The Control units K50/D50 and the VARIOstar handpiece are both compatible with C2 Profi/Master*.

Made in Germany

Electronics from Zubler are synonymous with long life and quality. Place your trust in our good name.

Precision, innovation, long life and high quality!

These terms describe an image of outstanding technology. Every day we strive to make these terms synonymous with the Zubler reputation.

More than 25 years of experience in the development of micro-motors including controllers (hardware and software) are the basis for the newly developed VARIOstar D50 – the all-around handpiece for dental laboratories.

Reliability and ease of service should not be taken for granted. As a mid-sized, owner-managed enterprise, we understand the importance of sustainable production. That is why we offer quick affordable service directly to our clients.



* C2-Profi/C2-Master is a registered trademark of Schick GmbH.



VARIOstar **K50** knee control unit

The new VARIOstar K50 knee control unit offers a simple and ergonomic solution for the daily routine in the laboratory.

Ease of use for your daily routine in the laboratory

- Simple input of rotation speed via keyboard
- Clear start-up signal for all suction units available on the market
- Easy to read, continuous rotation speed indicator on the knee control device
- Left-hand/right-hand rotation up to 50.000 rpm.

More than 25 years of experience in the development and production of electronic control systems are the basis for incredible solid performance, stable torque in the complete speed range and easy handling.



Rotation speed indicator

Easy to read and continuous.

Safety switch

To unlock the maximum rotation speed.

Right-hand rotation (plus button)

Button to increase the maximum rotation speed.

Speed control

Left-hand rotation (minus button)

Button to reduce the maximum rotation speed (operational safety)
Left and Right-Hand rotation up to maximum 50,000 rpm.

What our customers say ...

“Sustainability is very important to us as a mid-size enterprise – that’s why it’s only natural for us to choose quality products.

The VARIOstar is a versatile and very robust handpiece with a very good price/performance ratio. Like all -products from Zubler, the VARIOstar represents top quality and support for me!”

Alexander Schubert
Owner Dentaliving, Freiberg





VARIOstar D50


Tabletop control unit

The all-around VARIOstar D50 is available with 3 different control systems:

- Knee control
- Foot control
- Foot control lever




Knee control

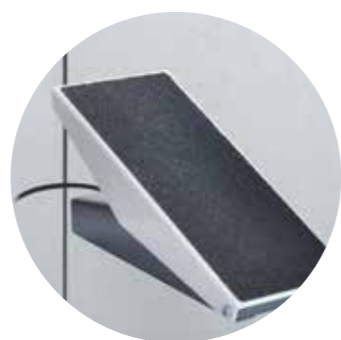

Foot control



Foot control lever

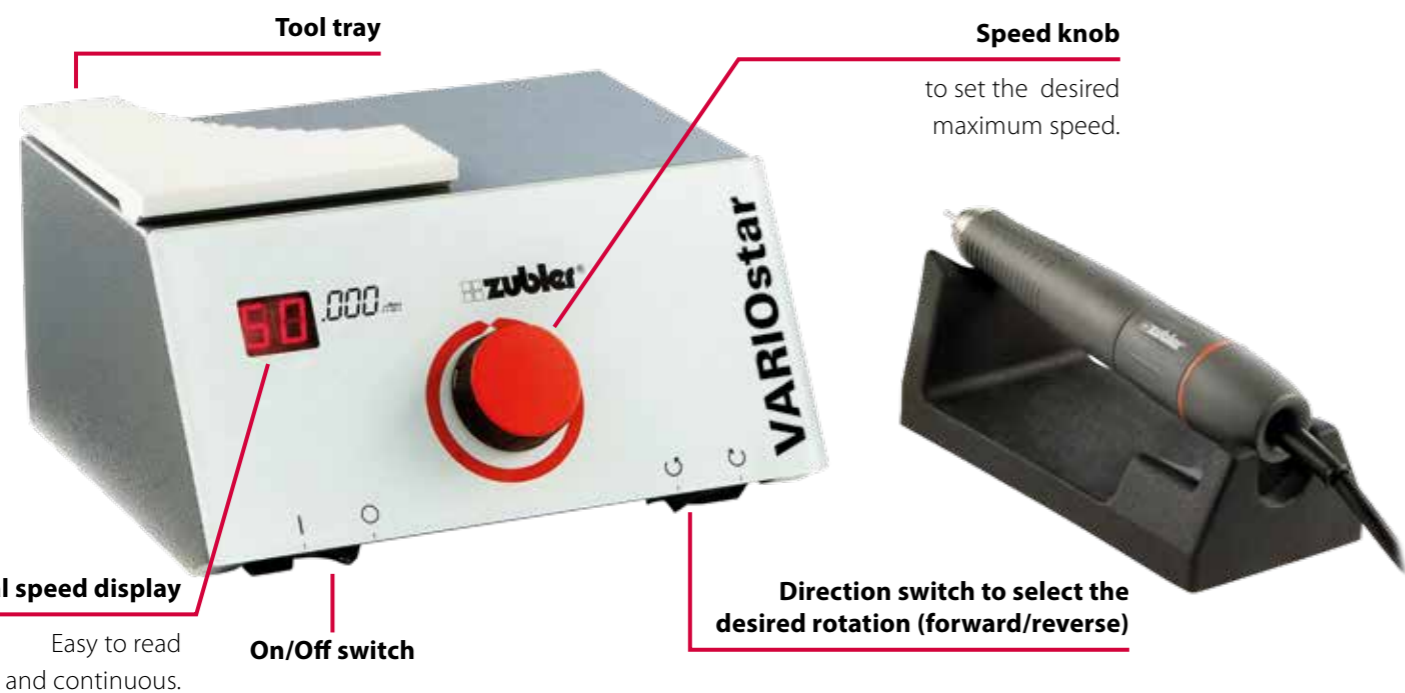

System-Variants:

804 - 3112 VARIOstar K50 Knee control unit 220 V - 240 V

804 - 3111 VARIOstar K50 Knee control unit 115 V

Contains:

804 - 3012 Knee control unit 220 V - 240 V

804 - 3002 Handpiece with chuck Ø 2,35 mm

804 - 3011 Knee control unit 115 V



804 - 3122 VARIOstar D50 Tabletop unit with Foot pedal 220 V - 240 V

804 - 3121 VARIOstar D50 Tabletop unit with Foot pedal 115 V

Contains:

804 - 3022 Tabletop control unit 220 V - 240 V

804 - 3002 Handpiece with chuck Ø 2,35 mm

804 - 3021 Tabletop control unit 115 V

804 - 1016 Foot pedal



804 - 3132 VARIOstar D50 Tabletop unit with Foot control lever left/right 220 V - 240 V

804 - 3131 VARIOstar D50 Tabletop unit with Foot control lever left/right 115 V

Contains:

804 - 3022 Tabletop control unit 220 V - 240 V

804 - 3002 Handpiece with chuck Ø 2,35 mm

804 - 3021 Tabletop control unit 115 V

804 - 1015 Foot control lever



804 - 3142 VARIOstar D50 Tabletop unit with Knee pedal 220 V - 240 V

804 - 3141 VARIOstar D50 Tabletop unit with Knee pedal 115 V

Contains:

804 - 3022 Tabletop control unit 220 V - 240 V

804 - 3002 Handpiece with chuck Ø 2,35 mm


804 - 3021 Tabletop control unit 115 V

804 - 1017 Knee Pedal (left/right mountable)



All systems include a tool for changing the collet chuck, a handpiece holder and operating instructions.

800215 / 02-2015

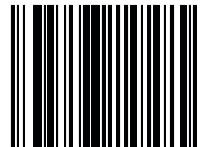

Technical data:

Length:	162 mm	Variants:	Knee control unit
Weight:	235 g		Tabletop unit with knee pedal
Rated voltage:	AC 100V/115V/230V/240V		Tabletop unit with foot pedal
Rated frequency:	~ 50/60Hz		Tabletop unit with foot control left/right
Speed:	1000-50000 rpm	Warranty:	Lifetime warranty on armature and winding
Chuck:	Ø 2.35 mm or optional Ø 3.00 mm		All other parts 1 Year
Torque:	7,8 Ncm		
Power consumption:	max. 270 W		
Protection class:	I		

Subject to technical changes.

Distributed by:



Zubler Gerätebau GmbH
Buchbrunnenweg 26
D - 89081 Ulm-Jungingen

Tel.: + 49 (0) 731 - 14 52 0
Fax: + 49 (0) 731 - 14 52 13
www.zubler-group.de