

The Flex Ring Ring System
 for all pressable ceramic and ingot sizes.
 A proven intelligent design.

Dimensional Stability

Unlike other silicone formers, this material guarantees:


- Long term stability in shape and dimension from daily use
- Tight fit for the ring base without widening the rim, preventing the investment from leaking



Patented Surface Extrusions:

The surface extrusions formed by these ring formers, increase the surface area of the ring by 40%, the advantages of this are:

- Rapid and homogeneous heat transference from the outside to the inside of the ring.
- Homogeneous and rapid cooling time

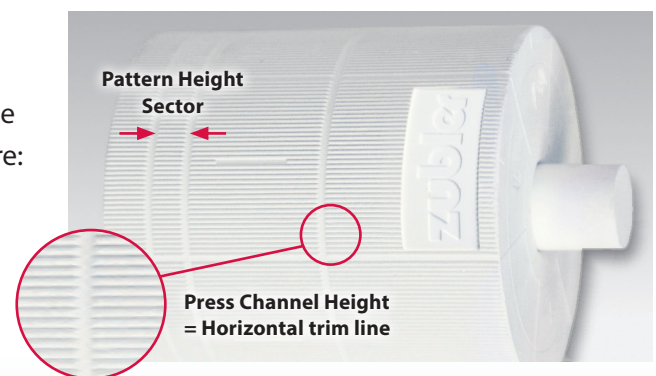

Sector Markings

The interior of the Zubler Flex Ring produces sector markings on the surface of the investment ring to:

- Indicate the exact location of the patterns
- Allow quick reduction of the ring to retrieve the section containing the pressed patterns
- Saves time and material (sandblasting)



Elasticity

Zubler's unique material composition ensures:


- Free investment expansion
- Easy cleaning
- Consistent surface quality of the ring preventing cracks



The Zubler® Flex Ring System can be matched to work with all of today's pressable systems.

Flexring

- 100 g ring - **Item No. 558/150**
- 200 g ring - **Item No. 558/1512**
- 300 g ring - **Item No. 558/1513**

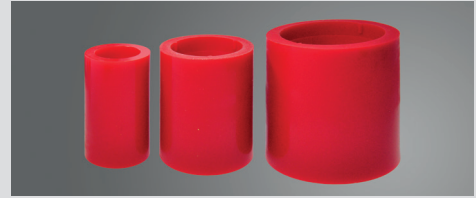

Ring Base

- for 100 g rings / 2 g Ingots Ø 12 mm - **Item No. 563/07508**
- for 200 g rings / 2g ingots Ø 12 mm - **Item No. 563/07501**
- for 200 g rings / 5g ingots Ø 16 mm - **Item No. 563/07530**
- for 300g rings / 2g ingots Ø 12 mm - **Item No. 563/07503**
- for 300g rings / 5g ingots Ø 16 mm - **Item No. 563/07504**



Leveling Top

- for 100 g rings - **Item No. 563/075101**
- for 200 g rings - **Item No. 563/07502**
- for 300 g rings - **Item No. 563/07505**



Ring Base / Leveling top (3 Pack)

(for lithium disilicate / ingot Ø 13mm)

- for 100g rings / ingot Ø 13 mm - **Item No. 898/118**
- for 200g rings / ingot Ø 13 mm - **Item No. 898/119**




Flexring Sets

- **Flexring 100 g Set - Ø 13 mm (for lithium disilicate / ingot Ø 13mm)**
100 g Flexring former, base & top for 3 g ingots (Ø 13mm), for 100 g rings - **Item No. 20/0228**
- **Flexring 200 g Set - Ø 13 mm (for lithium disilicate / ingot Ø 13mm)**
200 g Flexring former, base & top for 3 g ingots (Ø 13 mm), for 200 g rings - **Item No. 20/0229**
- **Flexring 100 g Set - Ø 12 mm**
100 g Flexring former, base & top for 2 g ingots (Ø 12 mm), for 100 g rings - **Item No. 20/0232**
- **Flexring 200 g Set - Ø 12 mm**
200 g Flexring former, base & top for 2 g ingots (Ø 12 mm), for 200 g rings - **Item No. 20/0231**
- **Flexring 200 g Set - Ø 16 mm**
200 g Flexring former, base & top for 5 g ingots (Ø 16 mm), for 200 g rings - **Item No. 20/0230**
- **Flexring 300 g Set - Ø 12 mm**
300 g Flexring former, base & top for 2 g ingots (Ø 12 mm), for 300 g rings - **Item No. 898/213**
- **Flexring 300 g Set - Ø 16 mm**
300 g Flexring former, base & top for 5 g ingots (Ø 16 mm), for 300 g rings - **Item No. 898/236**

Distributed by:


805 Marathon Parkway, Suite 130
Lawrenceville, GA 30046
(770) 921-2131
Texas Office (972) 600-9187
sales@zublerusa.com
www.zublerusa.com

* 09/2016 - Subject to technical changes.

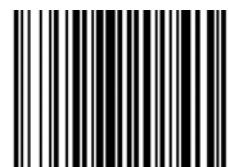

B00125-09/2016